


# Installation drawing RLB readhead with MS05 scale



Dimensions and tolerances in mm.

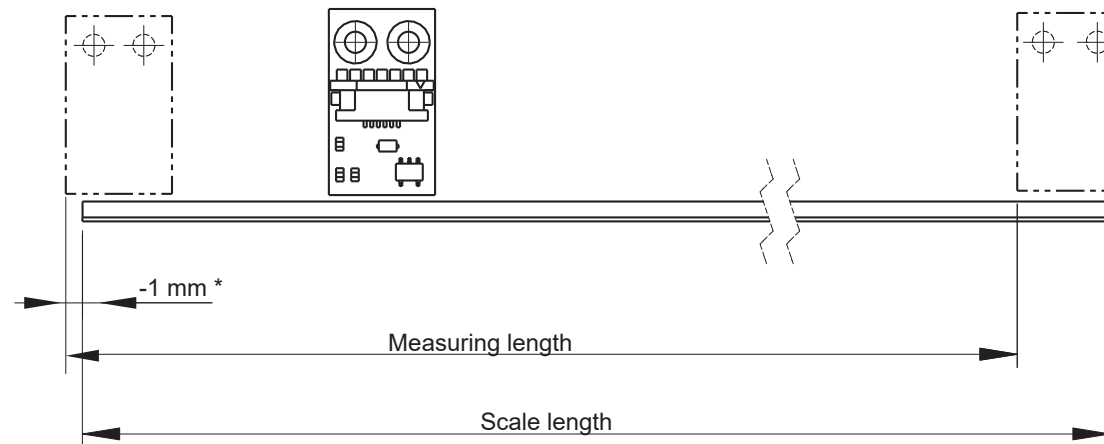

\* Beginning of measuring length from elastoferrite layer edge -1 mm  
Measuring length = Scale length - 10 mm