


# AksIM-2 BiSS-C register access

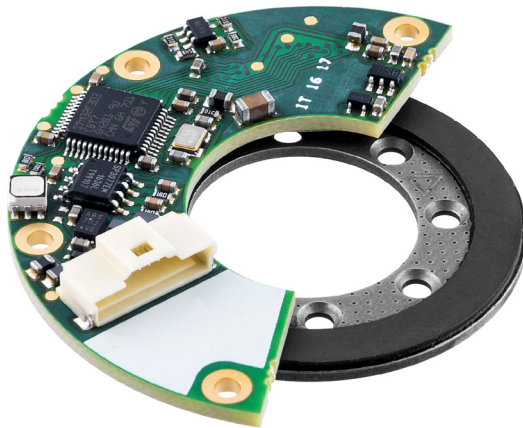

## Brief description

BiSS-C interface implemented in AksIM supports bidirectional communication in register access mode. Readhead is user programmable and comprises 4 kB of user memory. Implementation is compliant with BiSS Standard Encoder Profile (also referred to as “BP3”) which is used for grouping linear and rotary encoders. Details on BiSS register access and BP3 can be found in iC-Haus documentation.

## User implementation

User can implement bidirectional BiSS into own hardware according to BiSS documentation supplied by iC-Haus. User can also use iC-Haus iC-MB4 chip which translates high-level commands on the SPI bus to BiSS. Easiest to use is E201-9B interface from RLS including the accompanying software.

## Registers description

BiSS memory map for AksIM-2:

Bank	Address	Data Type	Access	Description
0	0x00 – 0x03	U32	R/W	Position offset
	0x04 – 0x07	U32	R/W	Position filter value
	0x08 – 0x0B	U32	R/W	Position filter speed
	0x0C – 0x0F	U32	R/W	Velocity filter value
	0x10 – 0x13	U32	R/W	Velocity filter speed
	0x14 – 0x17	U32	R/W	Multiturn counter preset
	0x18 – 0x2D	U8	R	Reserved
	0x2E	U8	R/W	Write protect lock
	0x2F – 0x30	U16	R	FW major version
	0x31 – 0x32	U16	R	FW minor version
	0x33 – 0x34	U16	R	Protocol version
	0x35 – 0x36	U16	R	Revision number
	0x37	U8	R	Checksum of bank 8
	0x38	U8	R	Checksum of bank 9
	0x39	U8	R	Checksum of bank 10
	0x3A	U8	R	Checksum of bank 11
	0x3B	U8	R	Checksum of bank 12
	0x3C	U8	R	Checksum of bank 13
	0x3D	U8	R	Checksum of bank 14
	0x3E	U8	R	Checksum of bank 15
0x3F	U8	R	Checksum of bank 0	
1 - 7	0x00 – 0x3F	U8	R	Reserved
8	0x00 – 0x3F	U8	R/W	Error Map [0 - 63]
9	0x00 – 0x3F	U8	R/W	Error Map [64 - 127]
10	0x00 – 0x3F	U8	R/W	Error Map [128 - 191]
11	0x00 – 0x3F	U8	R/W	Error Map [192 - 255]
12	0x00 – 0x3F	U8	R/W	Error Map [256 - 319]
13	0x00 – 0x3F	U8	R/W	Error Map [320 - 383]
14	0x00 – 0x3F	U8	R/W	Error Map [384 - 447]
15	0x00 – 0x3F	U8	R/W	Error Map [448 - 511]
16	0x00 – 0x3F	U8	R	BiSS EDS common part
17	0x00 – 0x3F	U8	R	BiSS EDS standard encoder profile
18 - 23	0x00 – 0x3F	U8	R	Reserved
24 - 87	0x00 – 0x3F	U8	R/W	User memory
Direct access	0x40	U8	R/W	Bank select
	0x41	U8	R	EDS bank
	0x42 – 0x43	U16	R	Profile ID
	0x44 – 0x47	U32	R	Serial number (encoded)
	0x48	U8	R/W	Key register
	0x49	U8	R/W	Command register
	0x4A – 0x4B	U16	R	Encoder status
	0x4C – 0x4D	U16	R	Temperature
	0x4E – 0x4F	U16	R	Signal level
	0x50 – 0x51	U16	R	Rotational speed
	0x52	U8	R	Self-calibration status
	0x53 – 0x5B	U8	R	Reserved
	0x5C – 0x61	U8	R	RLS serial number
	0x62 – 0x63	U8	R	Reserved
	0x64 – 0x73	U8	R	RLS part number
	0x74 – 0x77	U8	R	Reserved
	0x78 – 0x7D	U48	R	Device ID
	0x7E – 0x7F	U16	R	Manufacturer ID

BiSS EDS common part

Address	Symbol	Description	Data type	Unit	Value
0x00	EDS_VER	EDS version	U8	-	1
0x01	EDS_LEN	EDS length	U8	banks	2
0x02	USR_STA	Bank address USER start	U8	-	24
0x03	USR_END	Bank address USER end	U8	-	87
0x04	TMA	Min. permitted clock period	U8	1 ns	200
0x05	TO_MIN	Min. BiSS timeout	U8	250 ns	52
0x06	TO_MAX	Max. BiSS timeout	U8	250 ns	60
0x07	TOS_MIN	Min. BiSS timeout_S	U8	25 ns	0
0x08	TOS_MAX	Max. BiSS timeout_S	U8	25 ns	0
0x09	TCLK_MIN	Min. sampling period adaptive timeout	U8	25 ns	0
0x0A	TCLK_MAX	Max. sampling period adaptive timeout	U8	25 ns	0
0x0B	TCYC	Min. cycle time	U8	250 ns	table A
0x0C	TBUSY_S	Max. processing time SCD	U8	250 ns	0
0x0D	BUSY_S	Max. processing time SCD in clocks	U8	TMA	13
0x0E – 0x0F	PON_DLY	Max. "power on delay" until control communication is available	U16	1 ms	60
0x10	DC_NUM	Number of data channel in this device	U8	-	1
0x11	SL_NUM	Area of validity for this EDS (number of slave addresses)	U8	-	1
0x12	SL_OFF	Memory location for this EDS (slave ID within this device)	U8	-	0
0x13		Reserved	U8		0
0x14	BANK1	Bank address for content description of data channel 1 (Profile EDS)	U8	-	17
0x15	DLEN1	Data length for data channel 1	U8	bit	table A
0x16	FORMAT1	Data format for data channel 1	U8	bit	2
0x17	CPOLY1	CRC polynomial (8:1) for data channel 1	U8	-	0x21
0x18 – 0x33		Reserved	U8		0
0x34	BC_OFF	Bus coupler control location for this device (slave ID within this device)	U8	-	0
0x35 – 0x3E		Reserved	U8	-	0
0x3F	CHKSUM	Checksum (sum of all bytes within this bank)	U8	-	xx

U16 data is saved as a Big Endian (highest-value byte at the lowest-value address).

Table A

EDS parameter	Type of encoder							
	17 bit		18 bit		19 bit		20 bit	
	ST	MT	ST	MT	ST	MT	ST	MT
<b>DLEN1</b>	19	35	20	36	21	37	22	38
<b>TCYC</b>	104	116	104	120	108	120	108	120

ST - Single turn  
MT - Multiturn

Application note  
**MBD02\_01**

BiSS EDS standard encoder profile:

Address	Symbol	Description	Data type	Unit	Value
0x00	BP_VER	BiSS profile 3 version	U8	-	1
0x01	BP_LEN	Length of this profile	U8	banks	1
0x02 – 0x03	BP_ID	Profile identification BP3 (content also available in addresses 0x42 and 0x43)	U16	-	table B
0x04	FB1	Feedback bit 1 (nError = 1)	U8	-	1
0x05	FB2	Feedback bit 2 (nWarning = 2)	U8	-	2
0x06	PON_PDL	Max. "power on delay" until position data is available	U8	ms	60
0x07		Reserved	U8	-	0
0x08	EN_TYP	Encoder type (rotary = 0)	U8	-	0
0x09	POS_NUM	Position value (1 position)	U8	-	1
0x0A	MT_LEN	Data length MULTITURN	U8	bit	table B
0x0B	MT_FMT	Data format MULTITURN	U8	-	table B
0x0C	CO_LEN	Data length COARSE	U8	bit	0
0x0D	CO_FMT	Data format COARSE	U8	-	0
0x0E	FI_LEN	Data length FINE	U8	bit	table B
0x0F	FI_FMT	Data format FINE	U8	-	0
0x10 – 0x13	MT_CNT	Number of distinguishable revolutions	U32	count	table B
0x14 – 0x17	SIP_CNT	Number of signal periods per revolution	U32	PPR	1
0x18 – 0x1B	SIP_RES	Resolution factor per signal period (LSB of interpolation)	U32	count	table B
0x1C – 0x1F	CPOLY	CRC polynomial (32:1 of 0x43)	U32	-	0x21
0x20 – 0x23	CSTART	CRC start value	U32	-	0
0x24 – 0x25	ABS_ACU	Absolute accuracy	U16	LSB/2	table C
0x26 – 0x27	REL_ACU	Relative accuracy	U16	LSB/2	0
0x28 – 0x29	SPD_ACU	Angular speed depending accuracy	U16	LSB/2	0
0x2A – 0x2B	HYST	Hysteresis	U16	LSB/2	0
0x2C – 0x2D	SPD_MAX	Max. revolution speed	U16	1/min	10000
0x2E – 0x2F	ACC_MAX	Max. revolution acceleration	U16	1/min <sup>2</sup>	0
0x30 – 0x31	TMP_MIN	Min. operating temperature	U16	K	243 (233)
0x32 – 0x33	TMP_MAX	Max. operating temperature	U16	K	358 (378)
0x34 – 0x35	VLT_MIN	Min. operating voltage	U16	mV	4500
0x36 – 0x37	VLT_MAX	Max. operating voltage	U16	mV	5500
0x38 – 0x39	CUR_MAX	Max. current consumption	U16	mA	150
0x3A – 0x3E		Reserved	U8		0
0x3F	CHKSUM	Checksum (sum of all bytes within this bank)	U8	-	xx

U16, U32 data is saved as a Big Endian (highest-value byte at the lowest-value address).

Table B

Encoder type	EDS BP3 parameter					
	BP_ID	MT_LEN	MT_FMT	FI_LEN	MT_CNT	SIP_RES
17 bit ST	0x6213	0	0	17	0	131072
17 bit MT	0x6223	16	1	17	65536	131072
18 bit ST	0x6214	0	0	18	0	262144
18 bit MT	0x6224	16	1	18	65536	262144
19 bit ST	0x6215	0	0	19	0	524288
19 bit MT	0x6225	16	1	19	65536	524288
20 bit ST	0x6216	0	0	20	0	1048576
20 bit MT	0x6226	16	1	20	65536	1048576

Table C

Encoder size	Singleturn resolution (bits)			
	17	18	19	20
080	34	67	135	270
064	37	73	146	293
053	42	83	167	334
049	41	81	163	X
039	53	107	214	X
029	55	110	X	X

## Bank switching

BiSS registers are grouped into the banks in size of 64 bytes. Each register in each bank can be accessed with the address from 0x00 to 0x3F. Before access to a certain bank, it has to be selected in the Bank select register, which is mapped to address 0x40. For further information on bank switching refer to documentation provided by iC-Haus.

## Read access

All registers in AksIM memory are readable. Read access also supports sequential reading. It is possible to read up to 64 bytes forward from initialized read address. For detailed description on sequential read access refer to documentation provided by iC-Haus.

## Write access

Writable registers in AksIM memory are presented in table "Memory map". All registers can be write protected if write access is locked by the user, except of Bank select register. Sequential write access is only available in User memory banks, elsewhere it will be refused. For detailed description on sequential write access refer to documentation provided by iC-Haus.

## AksIM-2 programming

Position offset (encoder zero position), multiturn counter (optional) and register write protection can be programmed to the AksIM readhead. Additional to this, the readhead can be self-calibrated or reset to the factory settings.

### Position offset (encoder zero position)

Position offset is mapped to the registers 0x00, 0x01, 0x02, 0x03 of bank 0 in a big-endian format. User must first write separate bytes of a new position offset in counts to these addresses. Afterwards, they can be read to verify the proper write operation. At this moment, new position offset is not active yet. To validate it, user must first unlock the command register by writing the KEY. Next register access must be a write of the Command for saving programmed data to a non-volatile memory.

KEY: value 0xCD to address 0x48

Command for saving programmed data to a non-volatile memory: ASCII 'c' (0x63) to address 0x49

Note: Programming of position offset larger than encoder resolution or smaller than zero is discarded.

### Multiturn counter

Multiturn counter preset is available only in multiturn AksIM. It is mapped to the registers 0x14, 0x15, 0x16, 0x17 of bank 0 in a big-endian format. User must first write separate bytes of a new multiturn counter to these addresses. Afterwards, they can be read to verify the proper write operation. At this moment, new multiturn counter is not active yet. To validate it, user must first unlock the command register by writing the KEY. Next register access must be a write of the Command to validate the multiturn counter value.

KEY: value 0xCD to address 0x48

Command for validation of multiturn counter: ASCII 'm' (0x6D) to address 0x49

Note: Programming of multiturn counter larger than 65535 (unsigned) is discarded.

### Self-calibration

Self-calibration of the AksIM is suitable after assembly of the readhead. It improves the accuracy of the encoder, which is dependent on the installation precision. User must first unlock the command register by writing the KEY (0xCD) to the Key register (address 0x48). Next register access must be a write of the SelfCal command (0x41) to the Command register (address 0x49) for starting self-calibration procedure. During the procedure, communication over BiSS interface is not possible; encoder will not respond to any incoming clock cycles. Procedure completion is indicated by fast LED blinking for 3 seconds. If self-calibration was successful, LED blinks green, otherwise it blinks red. After that, BiSS interface is active again. The self-calibration status can be read from a register 0x52. It comprises a two bit counter and two status bits. Counter is incremented after end of each self-calibration procedure. Error bits show success or reasons for failure.

Before self-calibration procedure, the status from the register 0x52 should be read. Controller must remember current self-calibration counter (bits 1:0). After the command for self-calibration is sent, LED has to be observed for the procedure completion. If LED is not visible, the readhead should be polled via BiSS interface until communication with the readhead is established again or waiting for 10 seconds, which is the longest possible time for completion. After that, self-calibration status register should be read again. If self-calibration counter has increased by 1 (compared to the value read before), the self-calibration function was completed. If self-calibration was successful, both of status bits (b3, b2) are zero.

Rotational speed and direction during the self-calibration is not important and could be uneven. The only requirement is that shaft makes at least one complete turn during 10 second period after the command was sent.

Self-calibration status register at address 0x52:

Bit	Meaning
b7 - b4	Reserved
b3	Calculated parameters out of range. Mechanical installation is not inside tolerances.
b2	Timeout. Encoder ring did not make a complete turn during 10 seconds.
b1	Counter bit 1
b0	Counter bit 0

KEY: value 0xCD to address 0x48

Command for starting self-calibration procedure: ASCII 'A' (0x41) to address 0x49.

## Reset to factory settings

Reset to factory settings will set all programmed parameters to the default ones. User must first unlock the command register by writing the KEY. Next register access must be a write of the Command to reset readhead to the factory settings.

KEY: value 0xCD to address 0x48

Command to reset readhead to the factory settings: ASCII 'r' (0x72) to address 0x49

## Write protection

Write protection can be used to lock the write access of any writable register in AksIM memory map, except of Bank select register. It is mapped to the register 0x2E of bank 0. Its default value is 0x5A. To lock the write access, user should write any value other than 0x5A. After that, the write access of any register, except of Bank select, will be refused. All registers will behave as a non-writable registers.

Note: After locking the write access, the readhead cannot be programmed anymore. It also cannot be reset to the factory settings. All registers are still readable.

## User memory

User memory space comprised of 4 kB of RW registers is mapped between banks 24 and 87. User must first write desired data to these registers. Afterwards, the data has to be stored in a non-volatile memory. To do that, user must first unlock the command register by writing the KEY. Next register access must be a write of the Command to save user data to a non-volatile memory.

User memory banks also supports sequential write access. It is possible to write several consecutive registers in one access. For detailed description on sequential write access refer to documentation provided by iC-Haus.

KEY: value 0xCD to address 0x48

Command for saving user data to a non-volatile memory: ASCII 'u' (0x75) to address 0x49

Note: User memory is no longer writable if write access is locked by the user.

## Additional BiSS-C register access documentation

Documentation provided by iC-Haus describes BiSS-C register access in details:

[BiSS Protocol Description](#)

[BiSS EDS Common Part](#)

[BiSS Standard Encoder Profile \(BP3\)](#)

[BiSS register access details 1](#)

[BiSS register access details 2](#)

## Head office

---

### RLS merilna tehnika d.o.o.

Poslovna cona Žeje pri Komendi  
Pod vrbami 2  
SI-1218 Komenda  
Slovenia

**T** +386 1 5272100

**F** +386 1 5272129

**E** [mail@rls.si](mailto:mail@rls.si)

**www.rls.si**

## Document issues

Issue	Date	Page	Corrections made
1	13. 12. 2017	-	New document

This product is not designed or intended for use outside the environmental limitations and operating parameters expressly stated on the product's datasheet. Products are not designed or intended for use in medical, military, aerospace, automotive or oil & gas applications or any safety-critical applications where a failure of the product could cause severe environmental or property damage, personal injury or death. Any use in such applications must be specifically agreed to by seller in writing, and is subject to such additional terms as the seller may impose in its sole discretion. Use of products in such applications is at buyer's own risk, and buyer will indemnify and hold harmless seller and its affiliates against any liability, loss, damage or expense arising from such use. Information contained in this datasheet was derived from product testing under controlled laboratory conditions and data reported thereon is subject to the stated tolerances and variations, or if none are stated, then to tolerances and variations consistent with usual trade practices and testing methods. The product's performance outside of laboratory conditions, including when one or more operating parameters is at its maximum range, may not conform to the product's datasheet. Further, information in the product's datasheet does not reflect the performance of the product in any application, end-use or operating environment buyer or its customer may put the product to. Seller and its affiliates make no recommendation, warranty or representation as to the suitability of the product for buyer's application, use, end-product, process or combination with any other product or as to any results buyer or its customer might obtain in their use of the product. Buyer should use its own knowledge, judgment, expertise and testing in selecting the product for buyer's application, end-use and/or operating environment, and should not rely on any oral or written statement, representation, or samples made by seller or its affiliates for any purpose. EXCEPT FOR THE WARRANTIES EXPRESSLY SET FORTH IN THE SELLER'S TERMS AND CONDITIONS OF SALE, SELLER MAKES NO WARRANTY EXPRESS OR IMPLIED WITH RESPECT TO THE PRODUCT, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, WHICH ARE DISCLAIMED AND EXCLUDED. All sales are subject to seller's exclusive terms and conditions of sale which, where the seller is (a) RLS merilna tehnika d.o.o., are available at <https://www.rls.si/customer-service>, (b) Renishaw, Inc., are available at <http://www.renishaw.com/Shop/legal/en/-42186>, or (c) another person, are available on request, and in each case, are incorporated herein by reference, and are the exclusive terms of sale. No other terms and conditions apply. Buyer is not authorized to make any statements or representations that expand upon or extend the environmental limitations and operating parameters of the products, or which imply permitted usage outside of that expressly stated on the datasheet or agreed to in writing by seller.

RLS merilna tehnika d.o.o. has made considerable effort to ensure the content of this document is correct at the date of publication but makes no warranties or representations regarding the content. RLS merilna tehnika d.o.o. excludes liability, howsoever arising, for any inaccuracies in this document. © 2018 RLS d.o.o.